

FURNITURE GENERAL NOTES:

- FURNITURE AND EQUIPMENT THAT IS NOT IN CONTRACT (NIC) IS INDICATED WITH A DASHED LINE, AND ARE SHOWN FOR
- PROVIDE WOOD BLOCKING CONCEALED IN WALL FOR ALL FURNITURE, EQUIPMENT AND ACCESSORIES MOUNTED AND/OR SECURED TO WALL. TYPICAL OF ALL IN CONTRACT, NOT IN CONTRACT (NIC) AND CITY FURNISHED PRODUCTS (CFP). CONFIRM EXACT LOCATION WITH CONSULTANT PRIOR TO INSTALLATION.
- FINAL FURNITURE AND BOOKSHELVING LAYOUT, DESIGN CONSULTATION TO REVIEW AND APPROVE PRIOR TO INSTALLATION.

COORDINATE FINAL LOCATION OF ELECTRICAL FLOOR BOXES WITH

FLOORING GENERAL NOTES:

- SELECT FINISH INFORMATION NOTED ON DRAWINGS FOR PATTERN CLARIFICATION PURPOSES ONLY. FLOOR FINISH
 DRAWINGS TO BE READ IN CONJUCTION WITH ROOM FINISH SCHEDULE AND PROJECT MANUAL SPECIFICATIONS. REPORT DISCREPANCIES TO DESIGN CONSULTANT FOR CLARIFICATION.
- LUXURY VINYL TILE FLOORING & ASSOCIATED PATTERNING TO EXTEND BENEATH OPEN MILLWORK WHERE EXPOSED.

ABBREVIATIONS:

LUXURY VINYL TILE PORCELAIN TILE TILE CARPET WASTE RECYCLING RECEPTACLE W:WWR

LEGEND:


INDICATES LINEAR GRAIN DIRECTION OF FLOORING MATERIAL. REFER TO ROOM FINISH SCHEDULE FOR

RECESSED FLOOR BOX - REFER TO ELECT. (FINAL LOATION TO BE COORDINATED WITH FURNITURE LAYOUT)

DRAWING REFERENCE NOTES:

REFERENCE NOTE TAG DESCRIPTION

- TERMINATE PORCELAIN TILE BASE AT INTERIOR CORNER AS INDICATED, REFER TO ROOM FINISH SCHEDULE.
- FLOORING TRANSITION TO ALIGN WITH RECESSED TOE KICK OF SERVICE DESK. COORDINATE WITH MILLWORKER
- PORCELAIN TILE (PT1) TO SURROUND RECESSED FLOORING GRID COORDINATE TILE LAYOUT AND TRANSITIONS WITH FLOOR RECESS DETAILS AND SHOP DRAWINGS. EXTEND PORCELAIN TILE (PT1) INTO SMARTLOCKER WALL RECESS.
- TILE CARPET PATTERN (TC1, TC2, TC3). REFER TO PATTERN LAYOUT IN PROJECT MANUAL FOR DESIGN INTENT. TILE TO BE INSTALLED RUNNING NORTH TO SOUTH IN AN ASHLAR PATTERN AS PER MANUFACTURER'S WRITTEN INSTRUCTIONS.
- PORCELAIN TILE (PT1) PATTERN TO CHANGE DIRECTION. ALIGN TRANSITION AT CENTER OF WALL. TILE PATTERN WITHIN WASHROOM TO RUN CONTINUOUS INTO INDIVIDUAL STALLS.
- PORCELAIN TILE (PT1) BASE TO TERMINATE AT FACE OF SMARTLOCKERS (TYP.). COORDINATE WITH OWNER'S
- ALIGN START OF PORCELAIN TILE (PT1) PATTERN AT FACE OF WALL TO AVOID SMALL CUTS.

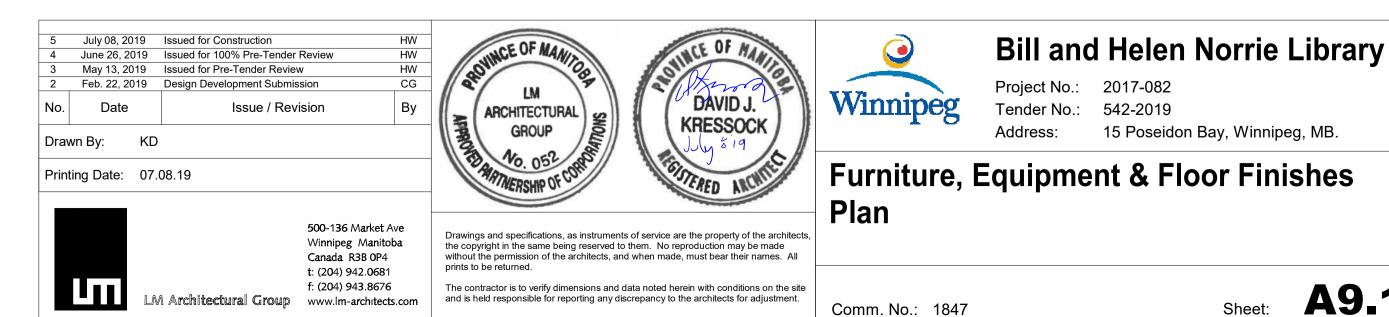

15 Poseidon Bay, Winnipeg, MB.

Plotted on: 7/17/2019 8:46:43 AM C:\Users\H.WEST\Documents\1847_BHN Library_H.West.rvt